


#### P Series Technical Note

#### Removal of the fuse holder

##### Step One:

Using a pocket screwdriver, insert the screwdriver in the slot under the door and gently rotate the screwdriver to unlatch the door.

When unlatched, raise the door and proceed with step two.

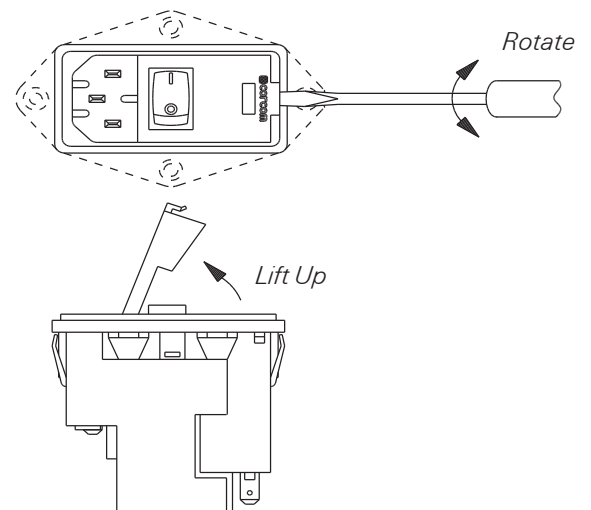

##### Step Two:

With the door in the raised position, apply the screwdriver at the slot in the end of the fuseholder and gently push down to raise the fuseholder and remove it from the housing.

